



Switch type: 5 position superswitch

Position 1: Bridge full humbucker

Position 2: Bridge outer coil/neck inner coil in parallel

Position 3: Bridge & neck full HB in parallel

Position 4: Neck inner coil

Position 5: Neck full humbucker

Notes: