



Switch type: 5 position superswitch

Position 1: Bridge full humbucker

Position 2: Bridge/neck inner coils in parallel.

Position 3: Bridge/neck outer coils in parallel

Position 4: Neck outer coil

Position 5: Neck full humbucker

Notes: