



Switch type: 5 position superswitch
 Position 1: Bridge full humbucker
 Position 2: Bridge inner coil
 Position 3: Bridge inner coil in parallel w. neck outer coil
 Position 4: Neck outer coil
 Position 5: Neck full humbucker
 Notes: