



Switch type: 5 position superswitch  
 Position 1: Bridge full humbucker  
 Position 2: Bridge inner coil  
 Position 3: Bridge inner coil in parallel w. neck outer coil  
 Position 4: Neck outer coil  
 Position 5: Neck full humbucker  
 Notes: