



Switch type: 5 position superswitch

Position 1: Bridge full humbucker

Position 2: Bridge outer coil + middle in parallel.

Position 3: Bridge outer coil + neck inner coil in parallel.

Position 4: Neck inner coil+ middle in parallel.

Position 5: Neck full humbucker

Notes: Use RW/RP middle pickup for hum free operation in pos 2 & 4.