



Switch type: 5 position superswitch.

Position 1: Bridge full humbucker.

Position 2: Bridge outer coil + middle in parallel.

Position 3: Middle pickup.

Position 4: Neck + middle in parallel.

Position 5: Neck.

Notes: Use RW/RP middle pickup for hum free operation in pos 2 & 4.